

CHROMARK Sign Kit



Instructions for your NEW SIGN KIT...

1. Remove the brushes and lid from the ink well.

2. Pour about 1 oz. of the corresponding color of ink onto the pad in the bottom of the ink well.

**Note: Ink will remain on top of the pad until it soaks in.*

3. Before replacing the lid, pre-ink the brushes 10-15 minutes by submerging them in the ink that has not yet soaked into the pad. This will allow ink to thoroughly penetrate the brush felt. Carefully replace the lid.

**Note: We use very firm felt in our brushes so it takes longer to absorb ink in the beginning. However, using firmer felt will give you a much longer wear while maintaining a finer edge.*

4. Gently press brushes down into ink well, allowing excess ink to settle for future use.

REPEAT Steps 1-4 for each of the remaining colors.

Your sign kit is ready for use!!

5. Re-ink brushes when they become dry by placing them into the ink well and pressing down several (2-3) times.

6. Refill ink well with ½ to 1 oz of ink each time the pad becomes dry.

**Note: ½ to 1 oz of ink is sufficient for refills. Using more ink or fully submerging the ink pad can create a mess well is accidentally spilled.*

Replacing Marker Felt

To replace the felt in the Chromarkers, remove staples from the old brushes with a knife (these staples are at the short end of each brush.) Put in the new felt and staple. This can be stapled on the flat, longer end of the brush. A regular desk stapler will work, but if you have a heavier stapler you may want to use it. To notch your new felt, cut a "V" in the area you want on one side of the felt with a razor blade or knife.

